

Manufacturer	Domain	Control device	Basis	Maintenance	Repair
AUDI					
A4 (8K)	Instrument cluster			Reset service interval Reset oil change	
	Engine electronics	UDS	Read and delete DTC Measurements		
	Gearbox electronics	UDS	Read and delete DTC Measurements		
	Airbag electronics	UDS	Read and delete DTC Measurements		
	Brake electronics	UDS	Read and delete DTC Measurements		
	A/C electronics	UDS	Read and delete DTC Measurements		
A4 (8W)	Instrument cluster			Reset service interval Reset oil change	
A5 (8T)	Engine electronics	UDS	Read and delete DTC Measurements		
	Gearbox electronics	UDS	Read and delete DTC Measurements		
	Airbag electronics	UDS	Read and delete DTC Measurements		
	Brake electronics	UDS	Read and delete DTC Measurements		
	A/C electronics	UDS	Read and delete DTC Measurements		
Q2	All systems	UDS	Read and delete DTC	Reset service interval Reset oil change Regeneration of diesel Initial run-in of AC compressor	Program exhaust gas Program throttle valve Calibrate parking brake
	Airbag electronics		Read and delete DTC Measurements		
	Gearbox electronics		Read and delete DTC Measurements		
	A/C electronics		Read and delete DTC Measurements		
	Power steering		Read and delete DTC Measurements		
	Instrument cluster		Read and delete DTC Measurements		
	Door electronics, front left		Read and delete DTC Measurements		
	Door electronics, front right		Read and delete DTC Measurements		
Q5 (8R)	Engine electronics	UDS	Read and delete DTC Measurements		
	Gearbox electronics	UDS	Read and delete DTC Measurements		
	Airbag electronics	UDS	Read and delete DTC Measurements		
	Brake electronics	UDS	Read and delete DTC Measurements		
	A/C electronics	UDS	Read and delete DTC Measurements		
Q7 (4M)	Instrument cluster			Reset service interval Reset oil change	
BMW					
1er F20/F21	Audio amplifier	AMPHHB20	Read and delete DTC Measurements		
	Headlamp electronics, left	FLE02_L	Read and delete DTC Measurements		
	Headlamp electronics, right	FLE02_R	Read and delete DTC Measurements		
	Navigation system/radio	ENTRYNAV	Read and delete DTC Measurements		
	Central control unit	ZBE6	Read and delete DTC Measurements		
	Park assist	PMA_15	Read and delete DTC Measurements		
	Camera-based driver assistance system	KAFAS20	Read and delete DTC Measurements		Calibrate camera
2er F22/F23/F87	Audio amplifier	AMPHHB20	Read and delete DTC Measurements		
	Headlamp electronics, left	FLE02_L	Read and delete DTC Measurements		
	Headlamp electronics, right	FLE02_R	Read and delete DTC Measurements		
	Navigation system/radio	ENTRYNAV	Read and delete DTC Measurements		
	Central control unit	ZBE6	Read and delete DTC Measurements		
	Park assist	PMA_15	Read and delete DTC		

	Camera-based driver assistance system	KAFAS20	Measurements Read and delete DTC		Calibrate camera
2er F45/F46	Audio amplifier	AMPHHB20	Measurements Read and delete DTC		
	Headlamp electronics, left	FLE02_L	Measurements Read and delete DTC		
	Navigation system/radio	ENTRYNAV	Measurements Read and delete DTC		
	Central control unit	ZBE6	Measurements Read and delete DTC		
	Headlamp electronics, right	FLE02_R	Measurements Read and delete DTC		
	Camera-based driver assistance system	KAFAS20	Measurements Read and delete DTC		
3er E90/E91	Transfer case	VGSG90		Perform oil service	Transmission replacement. Replacement of classification resistance Replacement of servo motor
3er F30/F31/F35/F80	Audio amplifier	AMPHHB20	Measurements Read and delete DTC		
	Headlamp electronics, left	FLE02_L	Measurements Read and delete DTC		
	Headlamp electronics, right	FLE02_R	Measurements Read and delete DTC		
	Navigation system/radio	ENTRYNAV	Measurements Read and delete DTC		
	Central control unit	ZBE6	Measurements Read and delete DTC		
	Park assist	PMA_15	Measurements Read and delete DTC		
	Camera-based driver assistance system	KAFAS20	Measurements Read and delete DTC		
4er F32/F33/F36/F82/F83	Audio amplifier	AMPHHB20	Measurements Read and delete DTC		
	Park assist	PMA_15	Measurements Read and delete DTC		
	Headlamp electronics, left	FLE02_L	Measurements Read and delete DTC		
	Navigation system/radio	ENTRYNAV	Measurements Read and delete DTC		
	Central control unit	ZBE6	Measurements Read and delete DTC		
	Headlamp electronics, right	FLE02_R	Measurements Read and delete DTC		
	Camera-based driver assistance system	KAFAS20	Measurements Read and delete DTC		
5er F07/F10/F11	Park assist	PMA_15	Measurements Read and delete DTC		
	Central control unit	ZBE6	Measurements Read and delete DTC		
6er F06/F12/F13	Park assist	PMA_15	Measurements Read and delete DTC		
	Central control unit	ZBE6	Measurements Read and delete DTC		
X3 E83	Transfer case	VGSG83		Perform oil service	Transmission replacement. Replacement of classification resistance Replacement of servo motor
X5 E70	Transfer case	VGSG70		Perform oil service	Transmission replacement. Replacement of classification resistance Replacement of servo motor
X5 F15	Immobiliser	BDC	Measurements Read and delete DTC		
	Vehicle centre, roof	FZD_F15	Measurements Read and delete DTC		
	All-round visibility camera / reversing camera	ICAM_F15	Measurements Read and delete DTC		
	Central control unit	ZBE6	Measurements Read and delete DTC		
	Park assist	PMA_15	Measurements Read and delete DTC		
X6 E71	Transfer case	VGSG70		Perform oil service	Transmission replacement. Replacement of classification resistance Replacement of servo motor
i3 i01	Airbag electronics	ACSM4I	Measurements Read and delete DTC	Reset service interval	
	Brake electronics	DSC_I1	Measurements Read and delete DTC	Initialisation of tyre pressure monitoring system	
	Engine electronics	EDMEI1	Measurements Read and delete DTC		
	Selector lever module	GWSI01	Measurements Read and delete DTC		
	A/C electronics	IHX_I1	Measurements Read and delete DTC	Actuators	
	Audio amplifier	AMPHHB20	Measurements Read and delete DTC		

	Immobiliser	BDC	Measurements Read and delete DTC Measurements	Calibrate height Initialise rain sensor
	Park assist	PMA_15	Read and delete DTC Measurements	
	Headlamp electronics, left	FLE02_L	Read and delete DTC Measurements	
	Headlamp electronics, right	FLE02_R	Read and delete DTC Measurements	
	Combox	TCB1	Read and delete DTC Measurements	
	Electric drive motor electronics	EME_I01	Read and delete DTC Measurements	
	Instrument cluster	KOMB25	Read and delete DTC Measurements	
	Range extender, engine electronics	RDME_I1	Read and delete DTC Measurements	
	Range extender, electric drive motor	REME_I1	Read and delete DTC Measurements	
	Power steering	EPSI1	Read and delete DTC Measurements	
	Navigation system/radio	ENTRYNAV	Read and delete DTC Measurements	
	Battery-charging management	LIM_I1	Read and delete DTC Measurements	
	Drive battery	SME_I1	Read and delete DTC Measurements	
	Refuelling function electronics	TFE_I1	Read and delete DTC Measurements	
	Vehicle sound generator	VSG_I01	Read and delete DTC Measurements	
	Vehicle centre, roof	FZD_F15	Read and delete DTC Measurements	
	Gateway	ZGW01	Read and delete DTC Measurements	
	All-round visibility camera / reversing camera	ICAM_F15	Read and delete DTC Measurements	
	Central control unit	ZBE6	Read and delete DTC Measurements	
	Camera-based driver assistance system	KAFAS20	Read and delete DTC Measurements	Calibrate camera

Ford

General Information	Airbag electronics		Variant maintenance	
	Passenger detection		Variant maintenance	
	Trailer electronics		Variant maintenance	
	Audio / radio		Variant maintenance	
	Audio module C		Variant maintenance	
	Door electronics front right		Variant maintenance	
	Brake electronics		Variant maintenance	
	DC/DC converter		Variant maintenance	
	Digital satellite receiver		Variant maintenance	
	Digital audio signal module		Variant maintenance	
	Park assist		Variant maintenance	
	Driving dynamics control unit		Variant maintenance	
	Door electronics front left		Variant maintenance	
	Remote control		Variant maintenance	
	Front control display		Variant maintenance	
	Gateway		Variant maintenance	
	Cruise control		Variant maintenance	
	Gearbox electronics		Variant maintenance	
	Camera system rear		Variant maintenance	
	Camera system front		Variant maintenance	
	Instrument cluster		Variant maintenance	
	Coolant heating module		Variant maintenance	
	Steering angle sensor module		Variant maintenance	
	Engine electronics		Variant maintenance	
	Multifunction steering wheel		Variant maintenance	
	Message centre		Variant maintenance	
	Parking brake		Variant maintenance	
	Tyre pressure monitoring		Variant maintenance	
	Headlight control A		Variant maintenance	
	Interface module for entertainment		Variant maintenance	
	Interface module front control unit		Variant maintenance	
	Power steering		Variant maintenance	
	Voice recognition module		Variant maintenance	
	Start-Stop system		Variant maintenance	
	Blind spot assistant left		Variant maintenance	
	Blind spot assistant right		Variant maintenance	
	Central electronics		Variant maintenance	

Kia

Soul (PS EV)	Airbag electronics		Read and delete DTC	
	Battery control unit		Read and delete DTC Read MW	Actuators
	Brake electronics		Read and delete DTC	
	DC/DC converter		Read and delete DTC Read MW	
	Electrical drive module		Read and delete DTC Read MW	Actuators
	High-voltage charging electronics		Read and delete DTC	

	Chassis electronics		Read MW Read and delete DTC Measurements		
	A/C electronics		Read and delete DTC Measurements		
	Instrument cluster		Read and delete DTC Measurements		
	Parking brake		Read and delete DTC Measurements		
	Tyre pressure monitoring system		Read and delete DTC Measurements		
	Keyless start system		Read and delete DTC Measurements		
	Power steering		Read and delete DTC Measurements		
	Central electronics		Read and delete DTC Measurements		
Mercedes Benz					
GLC X253	Powertrain	CEPC_205	Read and delete DTC Measurements		
	Battery control unit	SAM F - LIN: BSN_205 / diag_0003	Read and delete DTC Measurements		
	Electric fuel pump	FSCU_205	Read and delete DTC Measurements		
	Gearbox electronics	VGSNAG3_00904	Read and delete DTC Measurements		
	Interior mirror	SAM F - LIN: AISP_205 / diag_0001	Read and delete DTC Measurements		
	A/C electronics	HVAC 205 Rel_27	Read and delete DTC Measurements		
	Instrument cluster	IC_222_IC_205_E015	Read and delete DTC Measurements		
	Steering column electronics	SCCM_222_Valeo_I_HIU L_Sample_0x250B	Read and delete DTC Measurements		
	Tyre pressure monitoring system	TPM_222_Variant_00000 2	Read and delete DTC Measurements		
	Button block front left	TG_IT_FRS_205 diag_0001	Read and delete DTC Measurements		
	Touchpad	TPAD205_Series_006_X_ 13_1	Read and delete DTC Measurements		
	Door electronics rear left	DMRL_222_BR_222_R25 _1	Read and delete DTC Measurements		
	Door electronics rear right	DMRR_222_BR222_R25_ 1	Read and delete DTC Measurements		
	Door electronics front left	DMFL_222_BR_222_R25 _1	Read and delete DTC Measurements		
	Door electronics front right	DMFR_222_BR_222_R25 _1	Read and delete DTC Measurements		
GLS X166	Distance electronics	ARS310_0015	Read and delete DTC Measurements		
	Airbag electronics	SRS_176_400A	Read and delete DTC Measurements		
	Park assist	PTS_166_4210	Read and delete DTC Measurements		
	Electronic ignition switch	EZS_166	Read and delete DTC Measurements		
	Chassis electronics	Airmatic_166_004101	Read and delete DTC Measurements		
	Gearbox electronics	VGS40_805	Read and delete DTC Measurements		
	Seatbelt electronics, right	RevGUS VR 166 / diag_0400 variant D002	Read and delete DTC Measurements		
	Seatbelt electronics, left	RevGUS VL 166 / diag_0401 variant D003	Read and delete DTC Measurements		
	Fuel pump	FSCM_212 9E1D03	Read and delete DTC Measurements		
	Steering column electronics	MRM_166 0x040A	Read and delete DTC Measurements		
	Engine electronics	CR60 LS	Read and delete DTC Measurements		
	Multifunction camera	MPC_212 / diag_0011 000017	Read and delete DTC Measurements		
	Parking brake	EFB_246	Read and delete DTC Measurements		
	Rain/light sensor	RGLS_166 / diag_0006	Read and delete DTC Measurements		
	Headlamp electronics	HLC_166_000D headlamp, left, right	Read and delete DTC Measurements		
	Door electronics front left	TSG_VL_246_AEJ13_2_ BR166	Read and delete DTC Measurements		
	Door electronics, front right	TSG_VR_246_AEJ13_2_ BR166	Read and delete DTC Measurements		
	Central electronics, front	SAM_V_246	Read and delete DTC Measurements		
Nissan					
Leaf ZE0	A/C electronics	HVAC-40	Read and delete DTC Measurements		
	Current distribution module	IPDM-12	Read and delete DTC Measurements		
Navara D231	A/C electronics	HVAC-40	Read and delete DTC Measurements		
Pulsar C13	Engine electronics	ECM-CB	Read and delete DTC Measurements		
Qashqai J11	Engine electronics	ECM-F1	Read and delete DTC Measurements		

X-Trail T32	Engine electronics	ECM-F1	Measurements Read and delete DTC Measurements		
Opel					
Astra K	Radio control unit	2909	Read and delete DTC Measurements		
	Engine electronics	B14XNT LFE 3F06	Read and delete DTC Measurements		
Insignia B	Active driving safety	201	Read and delete DTC Measurements		
	Human-machine interface	201	Read and delete DTC Measurements		
	Voltage supply transformer	901	Read and delete DTC Measurements		
	Audio amplifier	020A	Read and delete DTC Measurements		
	Engine electronics	A17DTR 2F03	Read and delete DTC Measurements		
	Engine electronics	A17DTR 3604	Read and delete DTC Measurements		
	Engine electronics	A17DTR 1640	Read and delete DTC Measurements		
	Engine electronics	A17DTR 3A15	Read and delete DTC Measurements		
	Engine electronics	B20NFT LTG 0000	Read and delete DTC Measurements		
	Park assist	1301	Read and delete DTC Measurements		
	Park assist	1601	Read and delete DTC Measurements		
	Radio electronics	1101	Read and delete DTC Measurements		
	Radio electronics	601	Read and delete DTC Measurements		
	Chassis electronics	103	Read and delete DTC Measurements		
	Chassis electronics	102	Read and delete DTC Measurements		
	Trailer lighting	401	Read and delete DTC Measurements		
	Automatic transmission	T56 057A	Read and delete DTC Measurements		
Meriva B	Instrument cluster	4022	Read and delete DTC Measurements		
Mokka	Central electronics	700	Read and delete DTC Measurements		
Zafira B	Engine electronics	A18XEL 3902	Read and delete DTC Measurements		
	Engine electronics	A18XER 3901	Read and delete DTC Measurements		
Peugeot					
508 I	Trailer electronics	BSG_2010_RQ	Read and delete DTC Measurements		Actuators
	Audio controller	FMUX UDS	Read and delete DTC Measurements		
	Battery-charging management	BECB_GEN2	Read and delete DTC Measurements		Program battery
	CD changer	CDE UDS	Read and delete DTC Measurements		
	Electronic key	LCE UDS	Read and delete DTC Measurements		
	Power steering	HPI	Read and delete DTC Measurements		
	Voltage stabilisation	BPGA 2010 UDS	Read and delete DTC Measurements		
	Matrix display instrument cluster	MATT C UDS	Read and delete DTC		
	Windscreen wiper, left	Windscreen wiper UDS MOTE V Bosch ESP 8.1 508			Actuators Actuators
	Door electronics front left	PDPC TNB 2010			Actuators Actuators
	Instrument cluster	Magnetit Marelli 508 UDS			Actuators
Seat					
Arona	All systems	UDS	Read and delete DTC	Reset service interval Reset oil change Regeneration of diesel particulate filter Set oil quality	Program exhaust gas recirculation valve Program throttle valve Calibrate parking brake
	Trailer electronics		Read and delete DTC Measurements		
	Front sensor for driver assistance systems		Read and delete DTC Measurements		
	Gearbox electronics		Read and delete DTC Measurements		
	Information electronics		Read and delete DTC Measurements		
	Steering column electronics		Read and delete DTC		

			Measurements		
	Instrument cluster		Read and delete DTC		
			Measurements		
	Lane change assist		Read and delete DTC		
			Measurements		
Ateca	All systems	UDS	Read and delete DTC	Reset service interval	Program exhaust gas recirculation valve
				Reset oil change	Program throttle valve
				Regeneration of diesel particulate filter	Calibrate parking brake
				Set oil quality	
	Trailer electronics		Read and delete DTC		
			Measurements		
	Front sensor for driver assistance systems		Read and delete DTC		
			Measurements		
	Gearbox electronics		Read and delete DTC		
			Measurements		
	Information electronics		Read and delete DTC		
			Measurements		
	Steering column electronics		Read and delete DTC		
			Measurements		
	Instrument cluster		Read and delete DTC		
			Measurements		
	Lane change assistant		Read and delete DTC		
			Measurements		
Ibiza (6F)	All systems	UDS	Read and delete DTC	Reset service interval	Program exhaust gas recirculation valve
				Reset oil change	Program throttle valve
				Regeneration of diesel particulate filter	Calibrate parking brake
	Information electronics		Read and delete DTC		
			Measurements		
	Headlight range adjustment		Read and delete DTC		
			Measurements		
Skoda					
Karoq	All systems	UDS	Read and delete DTC	Reset service interval	Program exhaust gas recirculation valve
				Reset oil change	Program throttle valve
				Regeneration of diesel particulate filter	Calibrate parking brake
				Set oil quality	
	Gearbox electronics		Read and delete DTC		
			Measurements		
	Information electronics		Read and delete DTC		
			Measurements		
	Steering column electronics		Read and delete DTC		
			Measurements		
	Instrument cluster		Read and delete DTC		
			Measurements		
Kodiaq	All systems	UDS	Read and delete DTC	Reset service interval	Program exhaust gas recirculation valve
				Reset oil change	Program throttle valve
				Regeneration of diesel particulate filter	Calibrate parking brake
				Set oil quality	
	Boot lid electronics		Read and delete DTC		
			Measurements		
	Information electronics		Read and delete DTC		
			Measurements		
	Interface for access and start authorisation		Read and delete DTC		
			Measurements		
	Steering column electronics		Read and delete DTC		
			Measurements		
	Instrument cluster		Read and delete DTC		
			Measurements		
Superb (3V)	Engine electronics	UDS	Read and delete DTC		
			Measurements		
	Gearbox electronics	UDS	Read and delete DTC		
			Measurements		
	Airbag electronics	UDS	Read and delete DTC		
			Measurements		
	Brake electronics	UDS	Read and delete DTC		
			Measurements		
	A/C electronics	UDS	Read and delete DTC		
			Measurements		
Volkswagen					
Arteon	All systems	UDS	Read and delete DTC	Reset service interval	Program exhaust gas recirculation valve
				Reset oil change	Program throttle valve
				Regeneration of diesel particulate filter	Calibrate parking brake
	Wheel damping		Read and delete DTC		
			Measurements		
	Steering column electronics		Read and delete DTC		
			Measurements		
	Auxiliary/independent heater		Read and delete DTC		
			Measurements		
	Door electronics front left		Read and delete DTC		
			Measurements		
	Door electronics, front right		Read and delete DTC		

	Steering column lock		Measurements Read and delete DTC			
	Information electronics		Measurements Read and delete DTC			
Passat (3G)	Engine electronics	UDS	Measurements Read and delete DTC			
Polo (AW)	All systems	UDS	Read and delete DTC	Reset service interval	Program exhaust gas recirculation valve	
				Reset oil change	Program throttle valve	
				Regeneration of diesel particulate filter	Calibrate parking brake	
	Information electronics		Read and delete DTC Measurements			
T-Roc	All systems	UDS	Read and delete DTC	Reset service interval	Program exhaust gas recirculation valve	
				Reset oil change	Program throttle valve	
				Regeneration of diesel particulate filter	Calibrate parking brake	
		Steering column electronics		Read and delete DTC Measurements		
		Instrument cluster		Read and delete DTC Measurements		
		Door electronics front left		Read and delete DTC Measurements		
		Door electronics, front right		Read and delete DTC Measurements		
		Information electronics		Read and delete DTC Measurements		
		Front sensor for driver assistance systems		Read and delete DTC Measurements		
	Mercedes Trucks					
Antos manufactured from 2012 onwards	MS maintenance system				Maintenance data brake front axle 1	
					Maintenance data brake front axle 2	
					Maintenance data brake rear axle 1	
					Maintenance data brake rear axle 2	
					Maintenance data brake additional axle	
					Maintenance data diesel particle filter	
					Maintenance data transmission	
					Maintenance data front axle	
					Maintenance data rear axle 1	
					Maintenance data rear axle 2	
					Maintenance data inspection front axle	
					Maintenance data air filter	
					Maintenance data engine	
					Maintenance data auxiliary drive 1	
					Maintenance data auxiliary drive 2	
					Maintenance data auxiliary drive 3	
					Maintenance data retarder clutch	
Maintenance data universal maintenance						
Maintenance data transfer case						
Acros manufactured from 2012 onwards	MS maintenance system				Maintenance data brake front axle 1	
					Maintenance data brake front axle 2	
					Maintenance data brake rear axle 1	
					Maintenance data brake rear axle 2	
					Maintenance data brake additional axle	
					Maintenance data diesel particle filter	
					Maintenance data transmission	
					Maintenance data front axle	
					Maintenance data rear axle 1	
					Maintenance data rear axle 2	
					Maintenance data inspection front axle	
					Maintenance data air filter	
					Maintenance data engine	
					Maintenance data auxiliary drive 1	
					Maintenance data auxiliary drive 2	
					Maintenance data auxiliary drive 3	

					Maintenance data retarder clutch
					Maintenance data universal maintenance
					Maintenance data transfer case
Atego 3 manufactured from 2012 onwards	MS maintenance system				Maintenance data brake front axle 1
					Maintenance data brake front axle 2
					Maintenance data brake rear axle 1
					Maintenance data brake rear axle 2
					Maintenance data brake additional axle
					Maintenance data diesel particle filter
					Maintenance data transmission
					Maintenance data front axle
					Maintenance data rear axle 1
					Maintenance data rear axle 2
					Maintenance data inspection front axle
					Maintenance data air filter
					Maintenance data engine
					Maintenance data auxiliary drive 1
					Maintenance data auxiliary drive 2
					Maintenance data auxiliary drive 3
					Maintenance data retarder clutch
					Maintenance data universal maintenance
					Maintenance data transfer case
Unimog U423 manufactured from 2014 onwards	MS maintenance system				Maintenance data brake front axle 1
					Maintenance data brake front axle 2
					Maintenance data brake rear axle 1
					Maintenance data brake rear axle 2
					Maintenance data brake additional axle
					Maintenance data diesel particle filter
					Maintenance data transmission
					Maintenance data front axle
					Maintenance data rear axle 1
					Maintenance data rear axle 2
					Maintenance data inspection front axle
					Maintenance data air filter
					Maintenance data engine
					Maintenance data auxiliary drive 1
					Maintenance data auxiliary drive 2
					Maintenance data auxiliary drive 3
					Maintenance data retarder clutch
					Maintenance data universal maintenance
					Maintenance data transfer case
					Maintenance data time maintenance
Scania					
All manufactured from 2006 onwards	Engine electronics	Communication setup improved			